 
WIRING The wiring for the safety switch contacts MUST be used.

- Choose the wiring diagram from those below which matches that of the appliance. If in doubt contact the appliance Wiring diagram provided depict the additional wiring needed for the inclusion of the condensate pump. This scheme may be incorporated into the existing wiring centre junction box, fused spur etc. incorporated in the heating system

SAFETY SWITCH CONTACT NC/NO To use the safety switch contact as potential-free normally open contact,

- the following change must be done:
- Unscrew the cover fixing-screw, push in the clips and remove the cover.
- Pull off the flat plug socket from the middle
- contact of the safety switch and plug it on the top contact.





GENERAL SAFETY SWITCH WIRING DIAGRAM Boiler Fused Spur / Societ

0 72222 ·) /7***********

Neutral, earth and switching cables have been omitted for clarity

Standard Pump Wiring

